



## Instructions For No. 50682 Memory Pyrometer

**INTRODUCTION:** Because this pyrometer records the 12 tire temperatures in a specified order you must take the temperatures in that same order. Start with the RF, then RR, LR, and LF. Do the outside of the tire first, center, then the inside.

### **IMPORTANT NOTE:**

This pyrometer has special circuitry that will actually determine the final temp more quickly and accurately than ordinary pyrometers. Simply stick the probe into the tire and push the Read button immediately. No need to wait for the reading to stabilize - the microprocessor will do this for you. This is called "Anticipation Circuitry" because it electronically anticipates - computes - the final stabilized temp based on the rate of temp change of the probe. Almost instantly the pyrometer will double beep and move on to the next temperature location on the tire.

**WAIT UNTIL THE DISPLAY CHANGES TO MOVE THE PROBE.** This system gives you more accurate and consistent readings and helps minimize the variations caused by different people's style of taking tire temps.

**NOTE:** If you prefer to take temps in the traditional way - waiting for the temps to stabilize on the display, then record the readings - this pyrometer can be reset to operate this way. All other functions will remain the same. To change hold down Memory buttons #1 & 10 together for 2 seconds. The operating system will change so that when the Read button is pushed the actual temperature at that time will be recorded. No "Anticipation" of the final temp will take place. The unit will stay in this mode even if shut off. To change back to anticipation mode repeat the above procedure.

**TO TAKE TEMPERATURES:** Turn the pyrometer on. If any temps from your last use are there they must be Cleared before you can take a new temps. You can save them by storing in one of the Memories - 1 to 10.

**To CLEAR DISPLAY:** Push "Clear Display" button and hold for 2 seconds. The following message will appear:

**CLEARING DISPLAY  
DID YOU WANT TO SAVE?**

If you do want to save these in Memory **QUICKLY RELEASE** the "Clear Display" button. Once the display is cleared those temps are lost.

**BEGIN:** The display should now be blank except for the upper right temp location (Right Front outside). An arrow (>) indicates the active temp. Stick the probe into the outside edge of the tire and push the "Read" button immediately. **LEAVE THE PROBE IN THE TIRE UNTIL THE DISPLAY MOVES TO THE NEXT LOCATION.** You don't need to wait for the temps to stabilize. The pyrometer will double beep, freeze the temp on the display, and move to the next location. Move the probe to the center of the tire and repeat. Take the remaining temps in the same way. After you finish the last one (LF inside - > gone) all temps on the display will be frozen.

**MISTAKES:** If you make a mistake and don't feel that the last temp is correct you can "back up" one or more locations. Push the "Re-Read" button as many times as needed. Any temps in that location(s) will be erased.

**MORE TEMPS:** To take more temps it will be necessary to Clear the display. You may want to save these temps in one of the Memories. Temps on the display will stay until you Clear them, even if the unit is turned off.

**To STORE TEMPS IN MEMORY:** When you have taken a full (or partial) set of temps you can store them for recall later. Simply push "Store in Memory" and any Memory button - 1 to 10 - **AT THE SAME TIME**. A double beep will indicated that these temps are stored. If there are already temps in this Memory location a message will come up:

**THIS MEMORY IS FULL  
CHOOSE ANOTHER OR CLEAR**


If you no longer need those temps in Memory push the "Clear Memory" and that Memory number button and hold both for 2 seconds. A double beep will indicate that the Memory has been cleared. Now you may store the current temps in that Memory location.

**To RECALL TEMPS:** Simply push and hold any of the Memory buttons.

**Misc. Notes:**

- The probe tip must be small to give rapid response. There is no other way to do it. This makes it somewhat delicate and easily damaged! Please treat the probe with care and don't allow it to get bent. Use the yellow protector. **A DAMAGED PROBE TIP CANNOT BE REPAIRED AND WILL NOT BE WARRANTIED.**
- This unit shuts off automatically 5 minutes after the last button is pushed. However no temps are lost. Simply turn the unit back on and continue.
- A low battery indicator comes in the display. When needed replace with a good quality Alkaline 9 volt battery. The door is on the bottom side. In normal use the battery should last 3 months or more.
- Temp limit is 300°F. A different model reading in °C is available. Contact your dealer or the factory.
- For reference: one beep indicates that you have pushed a button, 2 beeps indicate that the pyrometer has done something - Cleared Display for example, and 3 beeps indicates an error of some sort.
- Several pre programed messages may appear to inform you of options. They will be self explanatory.
- For constant readings always measure the tires the same distance from the edges and push the probe into the tire to the same depth each time.
- The probe plug has a wide and a narrow spade. Do not plug the probe in backwards. If you do the pyrometer will read reversed - the hotter the probe gets the lower the temps will read.
- Keep this unit out of extreme heat or cold. If the pyrometer is very cold the display response time may be slower. This does not affect its ability to accurately measure temps. The electronics are fully temperature compensated. Take readings in the normal way. In extreme heat the display may not be visable. Allow it to cool off and recheck. Do not leave in direct sunlite for an extended time.
- A quick calibration check can be made with boiling water. Temp should read 208 to 212, depending on your altitude above sea level.

**Some buttons on this unit are for advanced features not built into this model. Those buttons do not function. This is normal.**

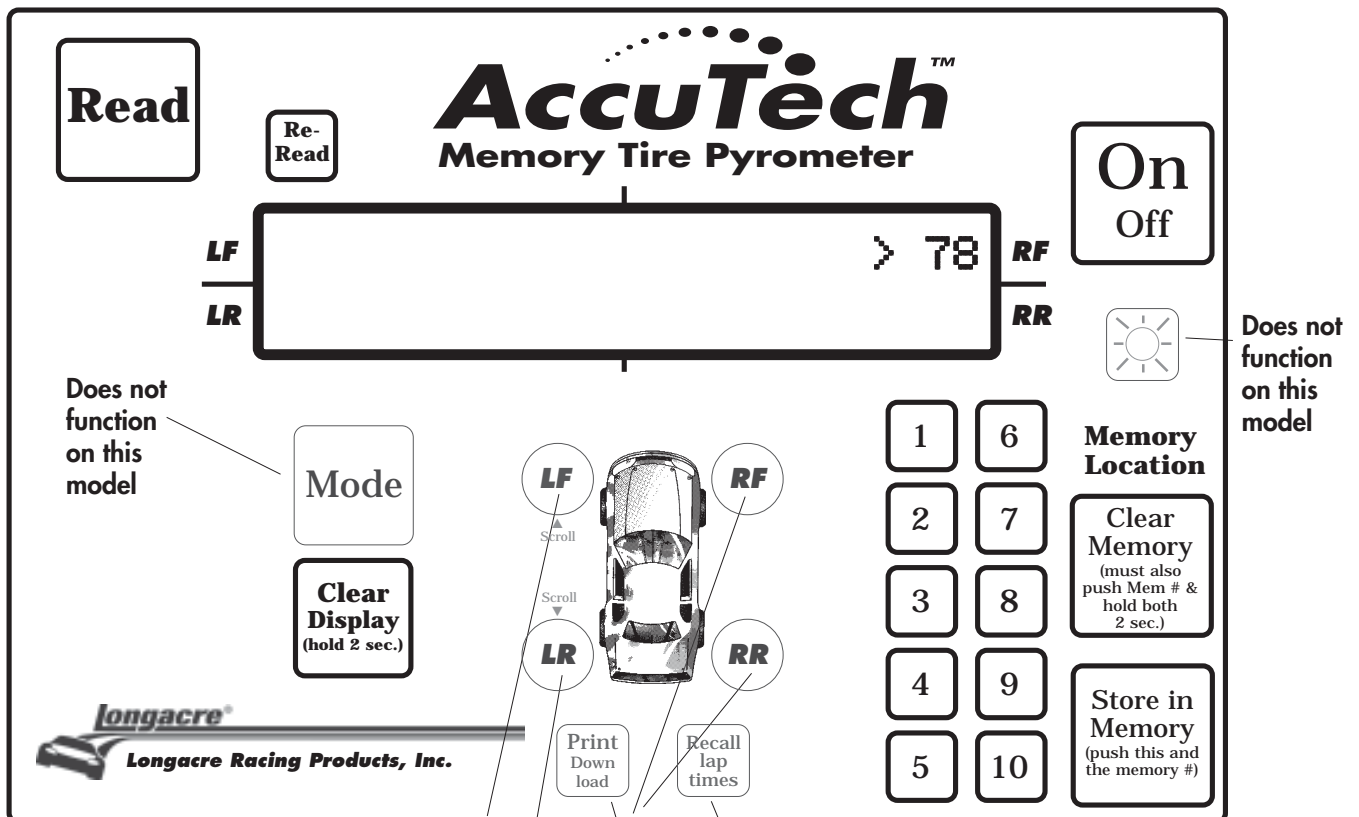

These 6 buttons do not function on this model

**Longacre®**



## **Quick Start Operating Instructions - #50682 Memory Pyro.**

See full instructions for details and further information

**Plug in probe:** Note wide and narrow spades on plug. Don't force it.

**Turn On & Clear display:** Any temps must be cleared to take new readings. Save old temps in Memory if needed (see below). Push Clear Display button & hold 2 sec.

**Order of temps:** Temps must be taken in the following order: RF, RR, LR, LF. Take outside first, center, then inside. Active temp is indicated by an arrow.

**Take temps:** Stick probe into tire and push Read button. **Leave the probe in the tire until the display temp moves to the next location.** Pyrometer will read the correct temp, freeze it on the display, and move to the next location (**pyrometer will not read properly if you move too soon - see full instructions**). Re-Read button backs up 1 temp.

**Store in Memory:** Push Store in Memory & memory # at same time.

**Recall Memory:** Simply push and hold any Memory #.

**Clear Memory:** Push Clear Memory and memory at same time & hold 2 sec.

**Care:** Be carefull of probe tip. Keep pyrometer out of extreme hot or cold.